
Avocent® Power Management Distribution Unit (PM PDU) Plug-in for the Avocent® DSView™ 4.5 Management Software

Release Notes

Version 2.0.1.8

September 22, 2016

This document outlines:

1. Instructions
2. Language Support Information
3. Features/Enhancements
4. Known Issues

1. Instructions

The Avocent® PM PDU plug-in version 2.0.1.8 requires Avocent® DSView™ management software version 4.5.0.263 or later. It is recommended that the PDU firmware is version 2.1.0.x. However this plugin still works with PDU firmware on version 2.0.1.x.

NOTE: Do not upgrade a PM PDU running version 1.2.0 or older through the DSView™ 4.5 management software. Instead, follow the steps outlined in section 8 of the PM PDU firmware release notes to upgrade a PM PDU running version 2.0.1 and older.

2. Language Support Information

English, Japanese and Simplified Chinese are supported by this version of the PM PDU plug-in.

Product	Software Type	Version	Filename
Avocent® PM PDU plug-in	Avocent® PM PDU plug-in	2.0.1.8	Plugin_PM-PDU_2.0.1.8_160601.jar.zip Plugin_PM-PDU_2.0.1.8_160601.jar.zip.md5

This plug-in supports the horizontal and vertical models of the PM 1000, 2000 and 3000 PDU families, which includes units with 3, 6, 10, 20 and 24 outlets.

3. Features/Enhancements

NOTE: Please refer to the installer/user guide for details about features supported by the PDU.

The features and enhancements supported by this version of the PM PDU plug-in include:

- The plug-in was built against Java 8 .

4. Known Issues

This release contains the following known issues:

- The Upgrade Firmware wizard may fail when Avocent® DSView™ 4.5 software Unit Status Polling is enabled. It is recommended that the Unit Status Polling is disabled when running the Upgrade Firmware wizard.
- If the appliance is not turned on or connected to the network when the appliance is deleted from DSView™ 4.5 software, the DSView™ 4.5 Certificate will not be cleared in the appliance. In this case, go to the appliance web (direct access without DSView™ 4.5 software), select *System – Security- DSView* page and click the *Clear DSView Certificate* button to be able to add the appliance to the DSView™ 4.5 software again.
- The following nodes are not saved in the Configuration Template:
 - System - Boot Configuration
 - Network - Devices
- The outlet status is not automatically updated after an operation that involves large number of outlets and/or long delays. The actual status is displayed by refreshing the page as the command is processed in the appliance.

